

MEGASAFE - KABA MAS

Model 52V Digital Lock - Operating Instructions

The Kaba Mas lock you have purchased may have a slightly different keypad than is identified in the product documentation. Instead of an "ENTER" key and a "CLEAR" key, you may see a "#" key and a "*" key, respectively.

The "ENTER" key or "#" key is used as part of a keypad command sequence.

The "CLEAR" key or "*" key can be pressed to clear a combination or key stroke.

| | | | |
|---|--|---|--|
| <p>1. Power the lock by briskly turning the dial back and forth in both directions, until simultaneous green and red light flashes on the display.</p> |  |  | |
| <p>2. Position the dial to cover the red bar and enter your combination (to cancel combination entry press clear).</p> |  |  | |
| <p>3. Turn dial to the right (clockwise) within ten seconds to retract bolt and open safe.</p> |  |  | |
| <p>4. To close, shut door and turn dial left (counter clockwise) until red bar is covered, bolt should be closed.</p> |  |  | |

** Please note: After entering an INCORRECT combination five times, you will be in penalty (locked out) for 3 minutes.

** Each consecutive wrong try after the first penalty will result in additional 3-minute penalty (lockout).

** If you experience a penalty the best solution is to wait 10 minutes and then try to enter the correct combination. If you continue to experience technical difficulties then contact us at **800-345-6552**.

Changing Combination Instructions

1. Power lock by briskly turning the dial left and right in both directions.
2. Press ENTER then 1.
3. Enter the current combination (the factory combination is 1-2-3-4-5-6).
4. Enter the new six-digit combination. Enter the new combination again for verification.